


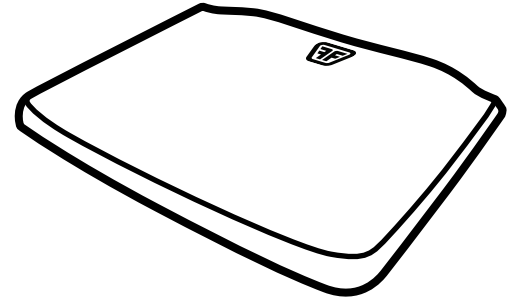

The FlightDeck



FlightDeck installation

FlightDecks can be installed over existing footpad grip tape if it is clean and in great condition. You will want to start with cleaning your existing grip tape of all dirt and grime using a bit of soap and water and a scrub brush - remember, if you are using water near your ports it can be helpful to tape them up. Dab and dry with a towel and then wait until everything is thoroughly dry before you adhere your FlightDeck. If your grip tape is too far-gone, you will need to remove the old grip tape from the OneWheel footpads. Feel free to search on YouTube under OneWheel Grip Tape Replacement for further guidance.

Applying the FlightDeck

- Do not apply your FlightDeck when surface temperature is below 50 degrees fahrenheit. If you use a hairdryer to remove the existing griptape make sure to let the footpad cool for 5 minutes before installing.
- Peel off protective release paper from the back of your FlightDeck.
- Start with your FlightDeck pressed up against your FlightFender, making sure that both sides of the deck are even with the sides of your pads. When you are ready, slowly push down your deck starting with the FlightFender side and moving slowly to the end of the pad. The goal is to achieve 100% adherence with no air bubbles, starting in one direction and pushing down little by little will assure that you get the best mount.
- Your FlightDeck is ready for immediate use. No curing necessary.